Location of Controls

RioVolt Player

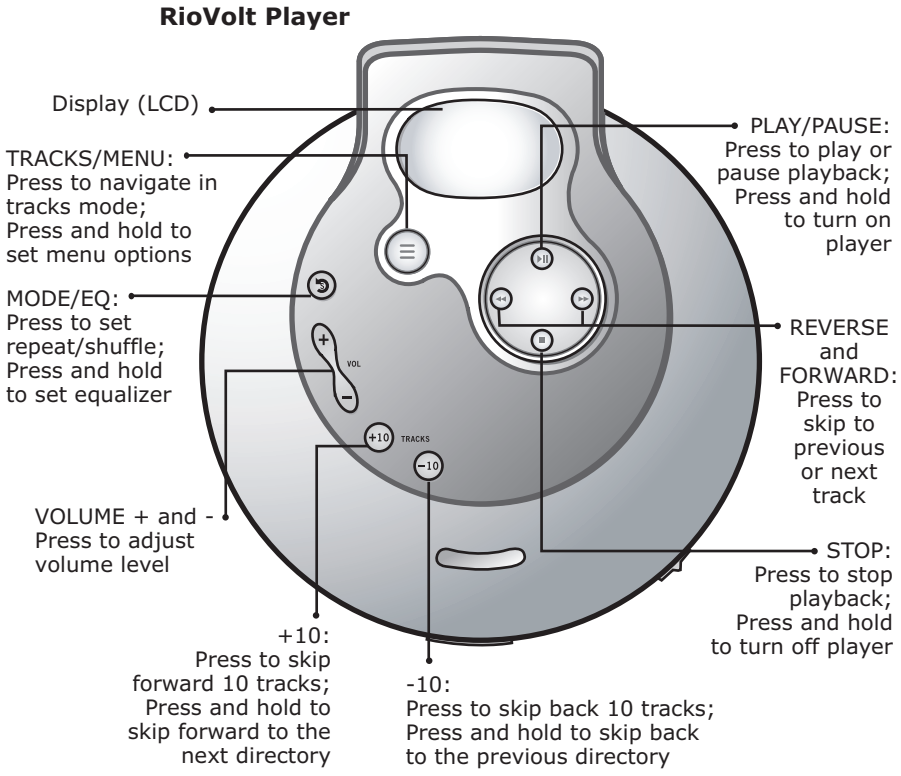
Display (LCD)
TRACKS/MENU: Press to navigate in tracks mode; Press and hold to set menu options
MODE/EQ: Press to set repeat/shuffle; Press and hold to set equalizer
VOLUME + and - Press to adjust volume level
+10: Press to skip forward 10 tracks; Press and hold to skip forward to the next directory
-10: Press to skip back 10 tracks; Press and hold to skip back to the previous directory
PLAY/PAUSE: Press to play or pause playback; Press and hold to turn on player
REVERSE and FORWARD: Press to skip to previous or next track
STOP: Press to stop playback; Press and hold to turn off player
VOL
TRACKS
+10
-10

Advanced Features

Repeat/Shuffle Modes

Press the MODE/EQ button to set the player to one of the following repeat/shuffle modes:

- **SFL ALL** Plays all tracks in random order once, then stops.
- **SFL DIR** Plays all tracks in the current directory/playlist in random order once, then stops.
- ↻ **DIR** Plays all tracks in the current directory/playlist in the order they are on the CD or playlist, then repeats.
- **SFL** ↻ **DIR** Plays all tracks in the current directory/playlist in random order, then repeats.
- ↻ **1** Plays the selected track, then repeats.
- **SFL** ↻ **ALL** Plays all tracks on the CD in random order, then repeats.
- ↻ **ALL** Plays all tracks on the CD in the order they are on the CD, then repeats.
- **DIR** Plays all tracks in the current directory/playlist in the order they are on the CD or playlist, then stops.

For detailed instructions and descriptions please see the User's Guide located at www.sonicblue.com /support

Tracks Navigation Mode

Press the TRACKS/MENU button to put the RioVolt in tracks navigation mode. Use the directional navigation controls to navigate within directories, and to select tracks to play. For example:

1. Press the TRACKS/MENU button. The LCD shows directories and tracks.
2. Press STOP ■ to move down the list of directories.
   Press PLAY/PAUSE ▶II to move up the list of directories.
3. Press FORWARD ►► to select a directory to navigate. The contents of the directory display.
4. Press STOP ■ to move down the list of track titles.
   Press PLAY/PAUSE ▶II to move up the list.
5. Press FORWARD ►► to select a track to play. The track begins playing.

Accessories
for your RioVolt can be found online at store.sonicblue.com

Rio volt SP150

Optional Accessories
visit store.sonicblue.com

LCD Overview

Playback Mode

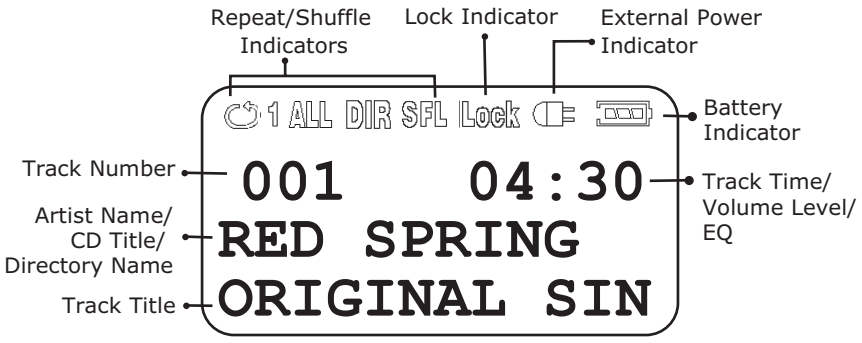

Tracks Navigation Mode

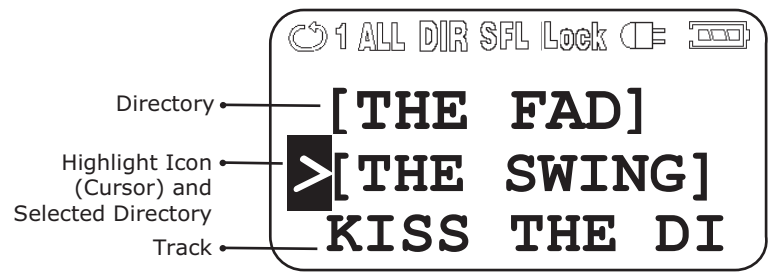

Menu Mode

WARNING

TO REDUCE THE CHANCE OF SHOCK OR INJURY, DO NOT USE or OPERATE THIS DEVICE IN OR NEAR WATER OR WET LOCATIONS.

CAUTION

RISK OF EXPLOSION, DAMAGE OR BATTERY LEAKAGE IS POSSIBLE IF BATTERY IS REPLACED INCORRECTLY OR BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO INSTRUCTIONS OR LOCAL LAWS.

Use of headphones while operating a vehicle is not recommended and is unlawful in some states and areas. Be careful and attentive while driving. Stop operation of the player if you find it disruptive or distracting while operating any type of equipment.

Listening to music at full power over extended periods of time can be damaging to the hearing of the user.

Class 1 Laser
Invisible laser radiation when open and interlocks defeated, avoid exposure to beam.